



# D-UN-DY-23<sup>Q&As</sup>

Dell Unity Deploy 2023 Exam

**Pass EMC D-UN-DY-23 Exam with 100% Guarantee**

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.geekcert.com/d-un-dy-23.html>

100% Passing Guarantee  
100% Money Back Assurance

Following Questions and Answers are all new published by EMC  
Official Exam Center

-  **Instant Download** After Purchase
-  **100% Money Back** Guarantee
-  **365 Days** Free Update
-  **800,000+** Satisfied Customers





### QUESTION 1

A storage administrator must configure replication from a production Dell Unity XT 680F to an offsite DR Dell Unity XT 480. Block resources must be replicated without data loss if the production site becomes unavailable. File resources can

be replicated with an acceptable amount of data difference on the destination.

What replication configuration meets the requirements?

- A. Set Unisphere resource filtering to All.
- B. Configure the replication connection mode to Both.
- C. Set an RPO of 0 on the synchronous replication sessions.
- D. Configure the replication interfaces on the 4-port mezzanine card.

Correct Answer: B

To meet the requirements, the replication connection mode must be set to Both, which allows both synchronous and asynchronous replication sessions to be configured on the same connection. This way, block resources can use synchronous replication, which ensures zero data loss, and file resources can use asynchronous replication, which allows some data difference on the destination. Setting Unisphere resource filtering to All is not necessary, as it only affects the display of resources in the Unisphere GUI. Setting an RPO of 0 on the synchronous replication sessions is redundant, as synchronous replication always has an RPO of 0. Configuring the replication interfaces on the 4-port mezzanine card is not relevant, as it only affects the performance and availability of the replication network. References: [Dell EMC Unity: Replication Technologies], [Dell EMC Unity: Unisphere Overview]

---

### QUESTION 2

What is a characteristic of FAST VP?

- A. Fast VP data relocation runs in the background at all times once it is enabled.
- B. Fast VP optimizes data replacement by moving 1 GB slices between disk tiers.
- C. Users can set the Fast VP data relocation rate.
- D. Users can enable or disable FAST VP at the LUN level.

Correct Answer: C

FAST VP (Fully Automated Storage Tiering for Virtual Pools) is a feature that automatically moves data within a storage pool based on the performance requirements and access patterns of the data. FAST VP data relocation runs in the background according to a user-defined schedule and rate. The schedule determines when the data relocation starts and ends, and the rate determines how much system resources are used for the data relocation. Users can set the Fast VP data relocation rate to High, Medium, Low, or None. High means that the data relocation has the highest priority and uses the most system resources, while None means that the data relocation is disabled. Fast VP data relocation does not run at all times, but only during the scheduled window. Fast VP optimizes data placement by moving 256 MB slices between disk tiers, not 1 GB slices. Users cannot enable or disable FAST VP at the LUN level, but only at the storage pool level. References: [Dell EMC Unity: FAST Technology Overview], [Dell EMC Unity: Storage Pools and RAID Groups]

---



### QUESTION 3

Multiple I/O modules must be installed in Dell Unity XT 680 storage.

Which module must be installed in slot 0?

- A. 4-Port 25 Gbps Ethernet
- B. 4-Port 16 Gb Fibre Channel
- C. 4-Port 10 Gbps Ethernet
- D. 12 Gb/s SAS back-end

Correct Answer: D

The Unity XT 680 system supports four types of I/O modules: 12 Gb/s SAS back-end, 4-Port 16 Gb Fibre Channel, 4-Port 25 Gbps Ethernet, and 4-Port 10 Gbps Ethernet. The 12 Gb/s SAS back-end module provides connectivity to the disk drives and expansion enclosures, while the other three types of modules provide network connectivity to the hosts and clients. The Unity XT 680 system has six I/O module slots, three for each SP. The 12 Gb/s SAS back-end module must be installed in slot 0 of each SP, and the other modules can be installed in slots 1 and 2 of each SP. Therefore, the correct answer is D. 12 Gb/s SAS back-end. References: Dell EMC Unity XT: Hardware Information Guide Dell EMC Unity XT: Installation Guide

---

### QUESTION 4

An administrator notices that the communications between Unisphere and the storage system get interrupted.

Which service task should the administrator perform to fix the issue with minimal impact?

- A. Restart Management Software
- B. Reinitialize
- C. Enable SSH
- D. Reboot Storage Processor

Correct Answer: A

The service task that the administrator should perform to fix the issue with minimal impact is Restart Management Software. This service task restarts the management software on both storage processors without affecting the data services or the host I/O. This can resolve the communication issues between Unisphere and the storage system. Reinitialize, Enable SSH, and Reboot Storage Processor are service tasks that have more impact and risk than Restart Management Software. References: [Dell EMC Unity: Unisphere Overview], [Dell EMC Unity: Service Tasks]

---

### QUESTION 5

What are two prerequisites when creating host configuration for NFS client? (Choose two.)

- A. Tenant information



B. Network Address

C. Subnet access

D. Hostname

Correct Answer: BD

Host configuration is the process of defining the host properties and access permissions for a host that connects to the Dell Unity XT system. For NFS clients, the host configuration requires two prerequisites:

Network Address: The network address is the IP address or the subnet mask of the NFS client that identifies the host on the network. The network address is used to register the host on the Dell Unity XT system and to grant access to the

NFS filesystems.

Hostname: The hostname is the name of the NFS client that is resolved by the DNS server or the local hosts file. The hostname is used to display the host information on the Unisphere UI and to enable host monitoring and alerting.

References:

Dell EMC Unity: Host Configuration

Dell EMC Unity: File System Configuration and Management

[D-UN-DY-23 VCE Dumps](#)

[D-UN-DY-23 Practice Test](#)

[D-UN-DY-23 Exam Questions](#)